




Safety Guy-Wire Dispenser

Standard Size: For use on wire coils with girths up to 63", such as a 500' coil of 7/16" strand.

Jumbo Size: For use on wire coils with girths up to 75", such as a 500' coil of 1/2" strand.


Be sure to read and completely understand this procedure before applying product. Be sure to select the proper PREFORMED™ product before application.

NOMENCLATURE

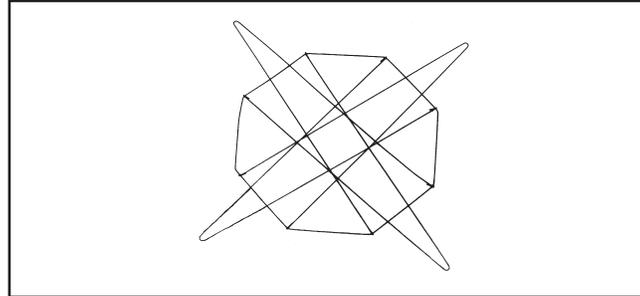


Safety Guy-Wire Dispenser folded for shipment


Step #1 Dispenser with all four legs unfolded ready to receive coil of strand.

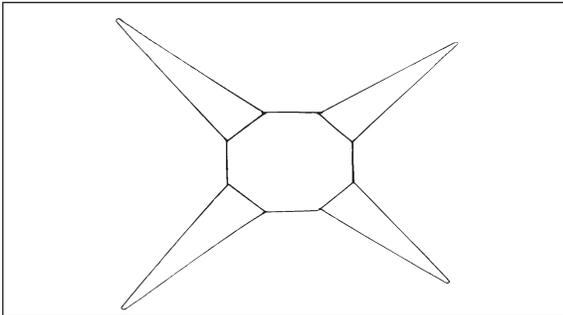


Step #3 Fold the legs of the dispenser over the coil. Legs overlap each other by 2" so that they can be twisted together to secure the dispenser. If legs are not long enough by themselves, tie wire can be used to secure.

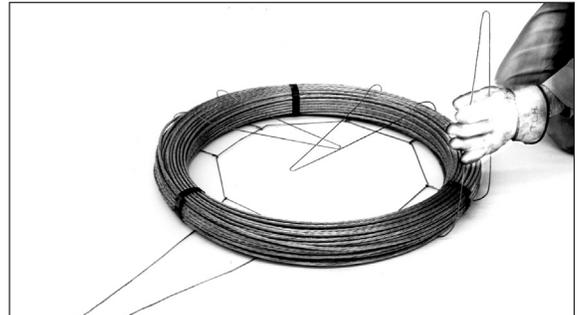

Step #2 With all four legs of the dispenser unfolded lay it on level ground. Place the banded coil of strand on top of the dispenser. Be sure the coil is centered on the dispenser.

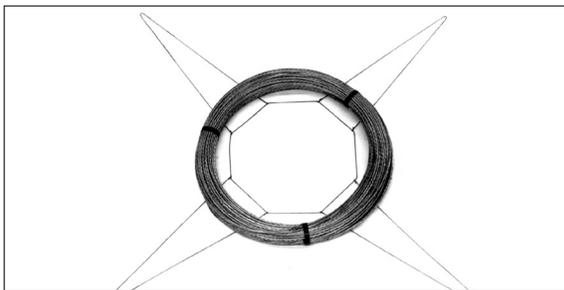

Step #4 Insert a tool (preferable a long-handled screwdriver) through each of the four legs and twist the legs into a "knot." It is not necessary to tighten down the legs all the way. As long as the legs are firmly knotted the dispenser is secure.

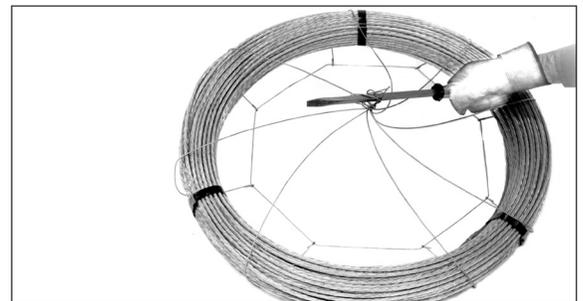


Step #5 The banding on the coil should be cut so that the coil can loosen and expand to fill out the cage of the dispenser.



Step #7 After sufficient strand has been drawn out and cut, the loose end should be placed back in the dispenser. The loose end is now secure and the coil can be moved safely.



Step #6 Turn the dispenser over so that the twisted "knot" is down. To pay out the coil, pull out the required length of strand. There is no need to hold the dispenser as the weight of the coil will hold it down.

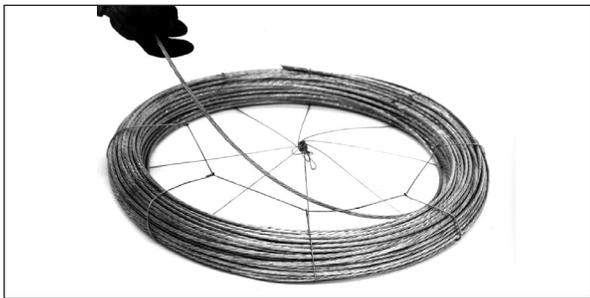

SAFETY CONSIDERATIONS

This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual.

FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN PERSONAL INJURY OR DEATH.

Do not modify this product under any circumstances.

This product is intended for use by trained technicians only. **This product should not be used by anyone who is not familiar with, and not trained to use it.**

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact. Be sure to wear proper safety equipment per your company protocol.

For proper performance and personal safety, be sure to select the proper size PREFORMED™ product before application.

PREFORMED products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.



PREFORMED LINE PRODUCTS

P.O. Box 91129, Cleveland, Ohio 44101 • 440.461.5200 • preformed.com • email: inquiries@preformed.com

SP2086-2